

PEI-Z230/45-CL-232-3 two-axis inclinometer



PEI-Z230/45-CL-232-3 is a dual axis inclinometer with RS232 output, intended for use in harsh environments where digital data transmission is needed, like in monitoring systems.

- High accuracy and resolution
- Digital filtering
- Shock resistant
- Zero setting
- IP67

Specifications:

Parameter	Value	Unit	Remark
Measuring range	±30 / 45	degree	Two-axis
Resolution	0.005	degree	
Accuracy ¹⁾	0.05	degree	@25° C
Zero temperature drift	±0.01	Degree / °C	25°C reference, -40—+85°C
Response time	1	Second	
Operating voltage	8 ... 30	V (dc)	24VDC recommended
Operating current	<60	mA	@ 24VDC
Operating temperature	-40—+85	°C	
Storage temperature	-45—+125	°C	


$$\text{Accuracy} = \sqrt{\frac{X_1^2 + X_2^2 + X_3^2 + \dots + X_n^2}{n}}$$

n
X₁, X₂, X₃, ... X_n

number of measurements, n ≥ 16

sum of n measured errors

Mechanical dimensions (horizontal position)

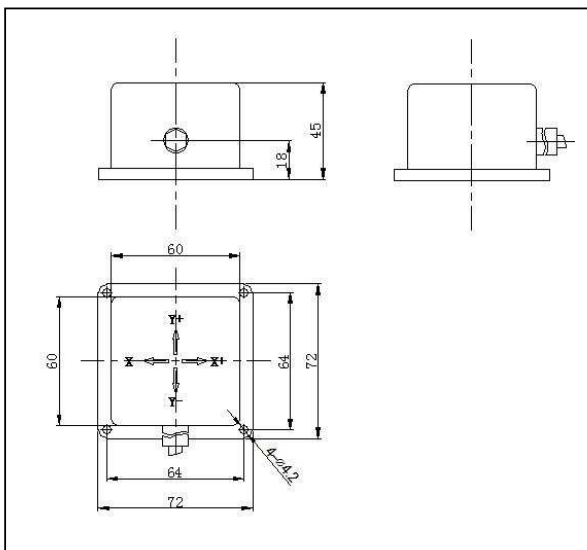

Connections

Red	Vcc
Black	Gnd
Blue	RXD
Green / Yellow	TXD

Option: PEI-Z230-CL-485-3
with RS485 Bus-Interface

Installation:

The inclinometer is factory calibrated.

It is important that the inclinometer measuring plane is parallel to the mounting plane.

The outputs shall equal the zero value when the sensor is in zero position.

The "Clearing" command allows zero setting

Angle output Data

1 RS232 serial interface communication protocol settings

Baud rate: 9600bps (default) Start bit: 1 bit Data bit: 8 bit Stop bit: 1 bit

2 Angle output format (ASC11 Format)

One set of data has 20 bytes.

Byte1: X

Byte2: +/-

Byte3: X-axis tens digit of angle value.

Byte4: X-axis units digit of angle value.

Byte5: point "."

Byte6: one digit after the decimal point of X-axis angle value.

Byte7: two digit after the decimal point of X-axis angle value.

Byte8: three digit after the decimal point of X-axis angle value.

Byte9: 0x20

Byte10: 0x20

Byte11: Y

Byte12: +/-

Byte13: Y-axis tens digit of angle value

Byte14: Y-axis units digit of angle value

Byte15: point "."

Byte16: one digit after the decimal point of Y-axis angle value.

Byte17: two digit after the decimal point of Y-axis angle value.

Byte18: three digit after the decimal point of Y-axis angle value.

Byte19: 0x0d

Byte20: 0x0a

ITEM	SIGNED	DATA	SPACE	ITEM	SIGNED	DATA	STOP
X	+/-	**.***	space	Y	+/-	**.***	enter/new line

Eg. current angle is +23.675 degrees on X-axis, -01.026 degrees on Y-axis,

Will be displayed as: X+23.675 Y-01.026

Note: display of value 99.999 means overrange.

User Instructions

"*^9600"	Sets baudrate at 9600bps, outputs "Baudrate:9600" after command is accepted
"*^1920"	Sets baudrate at 19200bps, outputs "Baudrate:19200" after command is accepted
"*^4800"	Sets baudrate at 4800bps, outputs "Baudrate:4800" after command is accepted
"&S"	Zero setting of current position, value is stored in the EEPROM, outputs "set current zero over" after command is accepted
"*RESET"	Factory settings will be restored after power-on., outputs "V" after command is accepted
"&R"	Clear the zero setting, outputs "clear zero setted" after command is accepted.
"\$"	Stops sending and receiving angle information, enters command mode
"*@"	Starts angle output mode, exits angle mode

Note 1: After Power-on, the Sensor will output the software version and enter automatically into output angle mode.

Note 2: If the user had set the zero point previously, then the system will output "relative angle measure" after Power-on.

Note 3: all modified settings through commands are stored in the EEPROM

Note 4: The commands have to be written in capital letters.

These Specifications are subject to change without notice!



GUEMISA (Electrónica Guerra y Miró Guemisa S.L.)
Sta. Virgilia, 29 - local - 28033 Madrid (Spain)
Tlfno.: (034) 91 764 21 00 Fax.: (034) 91 764 21 32
Email.: ventas@guemisa.com Web.: www.guemisa.com